

MIXING CHAMBER PARTS.

Component.	Carb. Type		List Price
	27/002	27/013	
Mixing Chamber Body	27/002	27/013	£ 2 s. 15 d. 0
Mixing Chamber Top	27/041	27/041	5 0
Cable Adjuster	4/035	4/035	6
Cable Adjuster Locknut	5/077	5/077	2
Throttle Valve	27/062	27/062	8 6
Throttle Valve Spring	4/037	4/037	4
Throttle Valve Cable Nipple	26/046	26/046	2
Jet Block	27/068	27/069	1 0 0
Jet Block Washer	27/049	27/049	2
Mixing Chamber Union Nut	27/042	27/042	5 0
Main Jet	26/052	26/052	2 6
Holding Bolt for Float Chamber	26/043	26/043	3 0
Washer for Float Chamber	4/053	4/053	2
Air Adjusting Screw	13/129	13/129	9
Air Adjusting Screw Locknut	16/010	16/010	2
Outlet Clip	6/201	27/073	5 0
Outlet Clip Screw	1962	1962	9
Plug Screw for Air Chamber	244/530	244/530	1 0
Air Intake Tube for Gauzes comp.	30/327	30/327	10 0
Air Intake Gauze only	30/110	30/110	1 6
Air Intake Gauze Clip	30/080	30/080	1 2
Air Intake Body only	30/326	30/326	6 0

FLOAT CHAMBER PARTS.

Component.	Carb. Type		List Price
	27/002	27/013	
Float Chamber complete	14/603	14/603	£ 3 s. 0 d. 0
Float Chamber Body only	14/603B	14/603B	2 0 0
Float Chamber Cover complete	14/138B	14/138B	3 9
Cover Lock Screw	14/021	14/021	4
Tickler	14/031	14/031	10
Tickler Spring	14/032	14/032	2
Tickler Cotter Pin	14/033	14/033	1
Tickler Washer	14/189	14/189	1
Float Needle	14/024	14/024	1 6
Float	14/015	14/015	3 9
Float Bow Spring	14/279	14/279	4
Banjo	14/035	14/035	3 0
Banjo Washer	14/037	14/037	2
Banjo Nut	14/337	14/337	9
Petrol Union Nut	14/042	14/042	9
Petrol Union Nipple	14/041	14/041	5