

## FLOAT CHAMBER PARTS.

Component	PART NUMBERS				Price s. d.
	Large Float Chamber		Small Float Chamber		
	Bottom Feed	Top Feed	Bottom Feed	Top Feed	
Float Chamber Complete, Twin Standard .. .. .	14/076	14/096	—	—	49 6
Float Chamber Complete .. .. .	64/079	64/099	—	—	23 0
Ditto ditto Single Standard .. .. .	—	—	62/079	62/099	19 6
*Float Chamber Body .. .. .	64/155SP	64/162SP	—	—	14 0
*Ditto ditto .. .. .	64/155SBP	64/162SBP	—	—	14 0
*Ditto ditto .. .. .	64/153LP	64/157LP	—	—	14 0
*Ditto ditto .. .. .	64/153LBP	64/157LBP	—	—	14 0
*Ditto ditto .. .. .	64/154L	64/161L	—	—	14 0
*Ditto ditto .. .. .	64/154LB	64/161LB	—	—	14 0
*Ditto ditto .. .. .	64/158S	64/163S	—	—	14 0
*Ditto ditto .. .. .	64/158SB	64/163SB	—	—	14 0
*Ditto ditto .. .. .	—	64/187 Bent	—	—	14 0
*Ditto ditto .. .. .	—	—	62/025S	62/028S	10 6
*Ditto ditto .. .. .	—	—	22/001SP	22/002SP	10 6
*Ditto ditto (Horizontal) .. .. .	64/177HZ	64/176HZ	—	—	14 0
*Ditto ditto ditto .. .. .	—	—	22/005/15HZ	22/006/15HZ	10 6
*Ditto ditto .. .. .	14/009 Twin	14/010 Twin	—	—	30 0
*Ditto ditto .. .. .	14/009 Twin-P	14/010 Twin-P	—	—	30 0
Float Chamber Cover (Standard) .. .. .	14/208	14/207	22/011	22/012	3 9
Float Chamber Cover (for Banjo fitting) .. .. .	—	14/634	—	15/663	3 9
Float Chamber Cover Lock Screw .. .. .	14/021	—	—	—	4
Float .. .. .	14/015	14/017	22/016	22/016	3 9
Needle Valve .. .. .	14/024	14/030	22/013	22/014	1 6
Float Chamber Needle Clip .. .. .	—	161/054	—	—	2
Tickler .. .. .	14/209	14/209	22/021	22/021	10
Tickler Stop .. .. .	14/210	14/210	22/037	22/037	3
Tickler Spring .. .. .	14/032	14/032	14/032	14/032	2
Tickler Cotter Pin .. .. .	14/289	14/289	14/289	14/289	1
Petrol Union Nut .. .. .	14/042	14/042	14/042	14/042	9
Petrol Union Nipple .. .. .	14/026	14/026	14/026	14/026	5
Bow Spring for Float .. .. .	14/014	—	—	—	4
Banjo Connection (Single) .. .. .	14/035	14/035	—	—	3 0
Ditto ditto ditto direct pipe fitting .. .. .	—	—	—	15/664	2 3
Ditto ditto (Twin 90°) .. .. .	14/043	14/043	—	—	6 9
Ditto ditto (Twin 180°) .. .. .	14/173	14/173	—	—	6 9
Banjo Connection Nut .. .. .	14/036	14/036	—	15/665	9
Banjo Connection Nut Washer .. .. .	14/037	14/037	—	—	2
Banjo Connection Copper Washer .. .. .	—	—	—	3039	2
Banjo Connection Fibre Washer .. .. .	—	—	—	15/666	1
Float Chamber Platform Plug Screw .. .. .	13/153	13/153	—	—	3
Washer for above .. .. .	14/039	14/039	—	—	1
Seating Locknut .. .. .	14/178	—	14/178	—	4
Seating Washer .. .. .	14/175	—	14/175	—	2
1" Lock Screw for Float Chamber Cover .. .. .	3310	3319	—	—	2

Please SEND patterns when possible.

\*When ordering Float Chamber Bodies please state finish. (Chromium or Black).

\*RE FLOAT CHAMBER SYMBOLS :—

SP denotes Short Base—Pump type.  
 SBP " Short Base—Banjo Pump type  
 LP " Long Base—Pump type.  
 LBP " Long Base—Banjo Pump type.  
 L " Long Base—Standard type.  
 LB " Long Base—Standard Banjo type.  
 S " Short Base—Standard type.  
 SB " Short Base—Standard Banjo type.  
 HZ " Type fitted to Horizontal Mixing Chamber Carburetters.

P.T.O.

**GUARANTEE.**—The Company take all possible reasonable care in the manufacture and the quality of their products. Purchasers are informed that, any part proved to be defective in manufacture or quality, and returned to the works within six months of its purchase new, will be replaced. The Company must respectfully point out however, that its responsibility and that of its agents, stockists and dealers, is limited to this Guarantee, and that they cannot, under any circumstances, be held responsible for any loss or for any contingent or resulting liability arising through any defect. These conditions of sale and use also apply when the Company's products form part of the original equipment of machines purchased new.

(THIS LIST IS PRINTED IN ENGLAND, AND IS ISSUED SUBJECT TO PRICES RULING AT THE DATE OF DELIVERY).

**AMAL LTD., Holdford Road, Witton, BIRMINGHAM, 6**  
 ENGLAND.

TELEPHONE: BIRCHFIELDS 4571 (6 lines).

TELEGRAMS: AMALCARB (PHONE), BIRMINGHAM.